

Lowrance Unit Resets

What is the Reset for ...	Soft Reset (Does not delete Data)	Hard Reset (Deletes stored data)
1220 Reset	N/A	N/A
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
3500 Reset	N/A	N/A
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
1240A Reset	N/A	N/A
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
AirMap 100 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the MODE (or PAGES) key	2. Press and hold the UP & DOWN arrow keys
	3. Press and release the PWR key	3. Press and hold the PWR key
	4. Release PAGES key when the unit completely powers up	4. Release both buttons when TEST MENU appears
		5. Advance cursor to FINAL SETUP, press EXIT, then ENTER to exit mode
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
AirMap 1000 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN & ZOUT keys
	3. Press and hold the PWR key	3. Press and release the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
AirMap 2000c Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN & ZOUT keys
	3. Press and hold the PWR key	3. Press and release the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears

Lowrance Unit Resets

	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
AirMap Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the MODE (or PAGES) key	2. Press and hold the UP & DOWN arrow keys
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when TEST MENU appears
		5. Advance cursor to FINAL SETUP, press EXIT, then ENTER to exit mode
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
AirMap 300 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the MODE (or PAGES) key	2. Press and hold the UP & DOWN arrow keys
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when TEST MENU appears
		5. Advance cursor to FINAL SETUP, press EXIT, then ENTER to exit mode
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
AirMap 500 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. A tone will sound
		5. When tone is sounding, release buttons and immediately press FIND.
		6. While pressing FIND, a higher tone will sound
		7. The unit will reset. Turn unit OFF and back ON.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
AirMap 600C Reset	1. Turn unit OFF	1. Turn unit OFF

Lowrance Unit Resets

	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. A tone will sound
		5. When tone is sounding, release buttons and immediately press FIND.
		6. While pressing FIND, a higher tone will sound
		7. The unit will reset. Turn unit OFF and back ON.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
Brunton Atlas Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the Status Page appears	4. A tone will sound
		5. When tone is sounding, release buttons and immediately press and hold the FIND key.
		6. While pressing FIND, a higher tone will sound
		7. The unit will reset. Turn unit OFF and back ON.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the UP & DOWN arrow keys
	3. Press and hold the PWR key	3. Press the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when TEST MENU appears
		5. Advance cursor to FINAL SETUP, press Exit, then ENT to exit mode
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>

Lowrance Unit Resets

GlobalMap 1000 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the CLR key	2. Press and hold the upper left hand corner key
	3. Turn unit ON	3. Turn unit ON
	4. Release both buttons when unit powers up	4. A test screen appears
		5. Release upper left hand corner key
		6. Press the CLR key
		7. Shut unit off
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 2000 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the CLR key	2. Press and hold the upper left hand corner key
	3. Turn unit ON	3. Turn unit ON
	4. Release both buttons when unit powers up	4. A test screen appears
		5. Release upper left hand corner key
		6. Press the CLR key
		7. Shut unit off
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 2400 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 3000 Reset	1. Turn unit OFF	1. Turn unit OFF

Lowrance Unit Resets

	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 4800 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when the unit beeps.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 100 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the MODE (or PAGES) key	2. Press and hold the UP & DOWN arrow keys
	3. Press and release the PWR key	3. Press the PWR key
	4. Release PAGES key when the unit completely powers up	4. Release both buttons when TEST MENU appears
		5. Advance cursor to FINAL SETUP, press EXIT, then ENT to exit mode
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 12 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the MODE (or PAGES) key	2. Press and hold the UP & DOWN arrow keys
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when TEST MENU appears
		5. Advance cursor to FINAL SETUP, press EXIT, then ENTER to exit mode
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 1600 Reset	1. Turn unit OFF	1. Turn unit off

Lowrance Unit Resets

	2. Press and hold the MODE (or PAGES) key	2. Press and hold the UP & DOWN arrow keys
	3. Press and release the PWR key	3. Press and hold the PWR key
	4. Release PAGES key when the unit completely powers up	4. Release both buttons when TEST MENU appears
		5. Advance cursor to FINAL SETUP, press EXIT, then ENTER to exit mode
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 2000 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the CLR key	2. Press and hold the upper left hand corner key
	3. Turn unit ON	3. Turn unit ON
	4. Release both buttons when unit powers up	4. A test screen appears
		5. Release upper left hand corner key
		6. Press the CLR key
		7. Shut unit off
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 3300c Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 3500C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears

Lowrance Unit Resets

	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 3600C iGPS Reset	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the PAGES key</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when the USA map appears</li> </ol>	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the ZIN&amp;ZOUT Keys at the same time</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when the USA map appears</li> </ol>
GlobalMap 4000M Reset	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the PAGES key</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when the USA map appears</li> </ol>	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the ZIN&amp;ZOUT Keys at the same time</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when the USA map appears</li> </ol>
GlobalMap 4900M Reset	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the PAGES key</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when the USA map appears</li> </ol>	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the ZIN&amp;ZOUT Keys at the same time</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when the USA map appears</li> </ol>
GlobalMap 5000C Reset	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the PAGES key</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when the USA map appears</li> </ol>	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the ZIN&amp;ZOUT Keys at the same time</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when the USA map appears</li> </ol>
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>

Lowrance Unit Resets

GlobalMap 5200C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 5300C iGPS Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 5500C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 6000C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 6500C Reset	1. Turn unit OFF	1. Turn unit OFF

Lowrance Unit Resets

	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 6600C HD Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 7000C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 7200C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 7300C HD Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time

Lowrance Unit Resets

	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 7500C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 7600C HD Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 8200C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 8300C HD Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key

Lowrance Unit Resets

	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 9200C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap 9300C HD Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap Baja Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when the unit beeps.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap Baja 480C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when the unit beeps.

Lowrance Unit Resets

	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap Baja 540C Reset	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the PAGES key</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when the unit powers up</li> </ol>	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the ZIN&amp;ZOUT Keys at the same time</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when the unit beeps.</li> </ol>
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalMap Baja 840C Reset	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the PAGES key</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when the USA map appears</li> </ol>	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the ZIN&amp;ZOUT Keys at the same time</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when the USA map appears</li> </ol>
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalNav 12 Reset	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the MODE (or PAGES) key</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when the unit powers up</li> </ol>	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the UP &amp; DOWN arrow keys</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when TEST MENU appears</li> <li>5. Advance cursor to FINAL SETUP, press EXIT, then ENTER to exit mode</li> </ol>
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalNav 200 Reset	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the MODE (or PAGES) key</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when the unit powers up</li> </ol>	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the UP &amp; DOWN arrow keys</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when TEST MENU appears</li> <li>5. Advance cursor to FINAL SETUP, press EXIT, then ENTER</li> </ol>

Lowrance Unit Resets

	<b>Soft Reset (Does not delete GPS Data)</b>	to exit mode <b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalNav 212 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the MODE (or PAGES) key	2. Press and hold the UP & DOWN arrow keys
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when TEST MENU appears
		5. Advance cursor to FINAL SETUP, press EXIT, then ENTER to exit mode
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalNav 310 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the MODE (or PAGES) key	2. Press and hold the UP & DOWN arrow keys
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when TEST MENU appears
		5. Advance cursor to FINAL SETUP, press EXIT, then ENTER to exit mode
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalNav II Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold CLR key	2. Press and hold the upper left hand corner key
	3. Turn Unit ON	3. Press and hold the ON key
	4. Release both buttons when the unit powers up	4. Release both buttons when TEST Screen appears
		5. Press the CLR key
		6. Shut the Unit off.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalNav II A Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold CLR key	2. Press and hold the upper left

Lowrance Unit Resets

		hand corner key
	3. Turn Unit ON	3. Press and hold the ON key
	4. Release both buttons when the unit powers up	4. Release both buttons when TEST Screen appears
		5. Press the CLR key
		6. Shut the Unit off.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
GlobalNav Sport Reset	1. Press the ON button	1. Turn unit OFF
	2. Press POS button	2. Press and hold F4 key
	3. Turn Menu	3. Press the ON key
	4. Press Right Arrow twice	4. Release both buttons when diagonal lines appear
	5. Press F5 (preset unit)	5. Press the CLR key to return to normal screen
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
HDS 5 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
HDS 5m Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map	4. Release both buttons when the

Lowrance Unit Resets

	appears	USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
HDS 5x Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
HDS 7 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
HDS 7m Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
HDS 8 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and</b>

Lowrance Unit Resets

HDS 8m Reset	1. Turn unit OFF	<b>trails)</b> 1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
HDS 10 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
iFINDER Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the Status Page appears	4. A tone will sound
		5. When tone is sounding, release buttons and immediately press and hold the FIND key.
		6. While pressing FIND, a higher tone will sound
		7. The unit will reset. Turn unit OFF and back ON.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
iFINDER Atlantis Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the Status Page	4. A tone will sound

Lowrance Unit Resets

	appears	
		5. When tone is sounding, release buttons and immediately press and hold the FIND key.
		6. While pressing FIND, a higher tone will sound
		7. The unit will reset. Turn unit OFF and back ON.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
iFINDER Express Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the Status Page appears	4. A tone will sound
		5. When tone is sounding, release buttons and immediately press and hold the FIND key.
		6. While pressing FIND, a higher tone will sound
		7. The unit will reset. Turn unit OFF and back ON.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
IFinder Explorer Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. A tone will sound
		5. When tone is sounding, release buttons and immediately press and hold the FIND key.
		6. While pressing FIND, a higher tone will sound
		7. The unit will reset. Turn unit OFF and back ON.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
IFinder Expedition C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time

Lowrance Unit Resets

	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. A tone will sound
		5. When tone is sounding, release buttons and immediately press and hold the FIND key.
		6. While pressing FIND, a higher tone will sound
		7. The unit will reset. Turn unit OFF and back ON.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
iFinder GO Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the Status Page appears	4. Release both buttons when the Status Page appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
iFINDER GO2 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the Status Page appears	4. Release both buttons when the Status Page appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
iFinder H2O Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. A tone will sound
		5. When tone is sounding, release buttons and immediately press and hold the FIND key.

Lowrance Unit Resets

		6. While pressing FIND, a higher tone will sound
		7. The unit will reset. Turn unit OFF and back ON.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
iFinder H2O C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. A tone will sound
		5. When tone is sounding, release buttons and immediately press and hold the FIND key.
		6. While pressing FIND, a higher tone will sound
		7. The unit will reset. Turn unit OFF and back ON.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
iFINDER Hunt Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. A tone will sound
		5. When tone is sounding, release buttons and immediately press and hold the FIND key.
		6. While pressing FIND, a higher tone will sound
		7. The unit will reset. Turn unit OFF and back ON.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
iFINDER Hunt C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key

Lowrance Unit Resets

	4. Release both buttons when the USA map appears	4. A tone will sound
		5. When tone is sounding, release buttons and immediately press and hold the FIND key.
		6. While pressing FIND, a higher tone will sound
		7. The unit will reset. Turn unit OFF and back ON.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
iFinder Map & Music Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the MAP/MUSIC key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. A tone will sound
		5. When tone is sounding, release buttons and immediately press and hold the FIND key.
		6. While pressing FIND, a higher tone will sound
		7. The unit will reset. Turn unit OFF and back ON.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
iFinder PHD Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the MAP/MUSIC key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. A tone will sound
		5. When tone is sounding, release buttons and immediately press and hold the FIND key.
		6. While pressing FIND, a higher tone will sound
		7. The unit will reset. Turn unit OFF and back ON.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
iFinder Pro Reset	1. Turn unit OFF	1. Turn unit OFF

Lowrance Unit Resets

	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. A tone will sound
		5. When tone is sounding, release buttons and immediately press and hold the FIND key.
		6. While pressing FIND, a higher tone will sound
		7. The unit will reset. Turn unit OFF and back ON.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
IWAY 100M Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the Speak key.	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. A tone will sound
		5. When tone is sounding, release buttons and immediately press and hold the FIND key.
		6. While pressing FIND, a higher tone will sound
		7. The unit will reset. Turn unit OFF and back ON.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Power Reset (Only resets power to the unit. No data is lost or settings changed.)</b>
IWAY 250C Reset	1. Use stylus to press the box in the upper left hand corner.	1. Use stylus to press button on the bottom of the unit.
	2. Select options. Page 3	2. Unit will shut off.
	3. Select Reset Options. Select Yes.	

Lowrance Unit Resets

	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
IWAY 350C Reset	1. Use stylus to press the box in the upper left hand corner.	1. Turn unit OFF
	2. Select options. Page 3	2. Press and hold the Power Key.
	3. Select Reset Options. Select Yes.	3. Continue to hold the Power Key until the screen goes blank.
		4. Release the Power Key. The unit will turn on and is reset.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
IWAY 500C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the MAP/MUSIC key	2. Press and hold the SPEAK/VOLUME key
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release all buttons when the unit powers up	4. Release both buttons when the test menu appears.
		5. Press the Hard Reset button. The unit will shut off.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
IWAY 600C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the MAP/MUSIC key	2. Press and hold the SPEAK/VOLUME key
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release all buttons when the unit powers up	4. Release both buttons when the test menu appears.
		5. Press the Hard Reset button. The unit will shut off.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
LCF 1440 Reset		1. Turn unit OFF - Press and hold the up arrow key.
		2. Press power, unit will enter production test mode.
		3. Press PWR/clear key 6 times.
		4. press MENU DOWN and unit will shut off.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>

Lowrance Unit Resets

LCG 2400 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the EXIT key	2. Press and hold the LEFT & RIGHT arrow keys
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when unit powers up
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LCX 15ci Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LCX 15ct Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LCX 15mt Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>

Lowrance Unit Resets

LCX 16ci Reset	1. Turn unit OFF	<b>trails)</b> 1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LCX 17M Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LCX 18C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LCX 19C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS</b>

Lowrance Unit Resets

		<b>Data such as Waypoints and trails)</b>
LCX 20C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LCX 25C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LCX 26C HD Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LCX 27C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LCX 28C HD Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT

Lowrance Unit Resets

		Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LCX 37C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LCX 38C HD Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LCX 104C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LCX 110C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key

Lowrance Unit Resets

	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LCX 111C HD Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LCX 112C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LCX 113C HD Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
LDT 3001 Reset	N/A	N/A
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
LDT 3003 Reset	N/A	N/A
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS</b>

Lowrance Unit Resets

		<b>Data such as Waypoints and trails)</b>
LGC Baja Reset	N/A	N/A
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LGC 12 Reset	N/A	N/A
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LGC 12S Reset	N/A	N/A
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LGC 12W Reset	N/A	N/A
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LGC 2000 Reset	N/A	N/A
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
LMF 200 Reset		<ol style="list-style-type: none"> <li>1. Turn Unit off</li> <li>2. Press and hold the UP button</li> <li>3. Turn unit on (activate power to NMEA network or connect unit to operating network)</li> <li>4. Release UP Button after Test screen appears.</li> <li>5. Turn unit off (disconnect power to NMEA 2000 network or remove unit from network)</li> </ol>
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
LMF 400 Reset		<ol style="list-style-type: none"> <li>1. Turn Unit off</li> <li>2. Press and hold the DOWN button</li> <li>3. Turn unit on (activate power to NMEA network or connect unit to operating network)</li> <li>4. Release DOWN Button after Test screen appears.</li> <li>5. Turn unit off (disconnect power to NMEA 2000 network or remove unit from network)</li> </ol>

Lowrance Unit Resets

	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LMS 160 Reset	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the MODE (or PAGES) key</li> <li>3. Press and release the PWR key</li> <li>4. Release PAGES key when the unit completely powers up</li> </ol>	<ol style="list-style-type: none"> <li>1. Turn unit off</li> <li>2. Press and hold the UP &amp; DOWN arrow keys</li> <li>3. Press and release the PWR key</li> <li>4. Release both buttons when TEST MENU appears</li> <li>5. Advance cursor to FINAL SETUP, Press ENTER</li> </ol> <p>and the unit should power itself off.</p>
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LMS 240 Reset	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the PAGES key</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when the USA map appears</li> </ol>	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the ZIN&amp;ZOUT Keys at the same time</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when the USA map appears</li> </ol>
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LMS320 Reset	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the PAGES key</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when the USA map appears</li> </ol>	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the ZIN&amp;ZOUT Keys at the same time</li> <li>3. Press and hold the PWR key</li> <li>4. Release both buttons when the USA map appears</li> </ol>
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LMS320DF Reset	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the PAGES key</li> <li>3. Press and hold the PWR key</li> </ol>	<ol style="list-style-type: none"> <li>1. Turn unit OFF</li> <li>2. Press and hold the ZIN&amp;ZOUT Keys at the same time</li> <li>3. Press and hold the PWR key</li> </ol>

Lowrance Unit Resets

	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LMS 330c Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LMS 332C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LMS 334C iGPS Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LMS 335cDF Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and</b>

Lowrance Unit Resets

LMS 337C DF Reset	1. Turn unit OFF	<b>trails)</b> 1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LMS 339C DF iGPS Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LMS 350 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the CLR key	2. Press and hold the upper left hand corner key
	3. Turn unit ON	3. Turn unit ON
	4. Release both buttons when unit powers up	4. A test screen appears
		5. Release upper left hand corner key
		6. Press the CLR key
		7. Shut unit off
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LMS 350A Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the CLR key	2. Press and hold the upper left hand corner key
	3. Turn unit ON	3. Turn unit ON
	4. Release both buttons when unit powers up	4. A test screen appears

Lowrance Unit Resets

		5. Release upper left hand corner key
		6. Press the CLR key
		7. Shut unit off
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LMS 480 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LMS 480DF Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LMS 520C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LMS 522C iGPS Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key

Lowrance Unit Resets

	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LMS 525C DF Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
LMS 527C DF iGPS Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. Release both buttons when the USA map appears
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
LSM 3 Reset	N/A	N/A
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
LST-3800 Reset	Press Menu and go to Options. Press Menu again. Press the Down button until the box next to Factory S is flashing. Press Menu to select that option.	N/A
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes MMSI number!!)</b>
LVR 850 Reset		Turn the radio OFF
		Press and hold the SCAN and the MEM key.
		Turn the ON/VOL knob to the ON position while keeping keys depressed
		Release keys

Lowrance Unit Resets

	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
M52 Reset	Use Reset Options in the menu.	1. Turn unit OFF - Press and hold the down arrow key. 2. Press power, unit will enter production test mode. 3. Press exit key 5 times. 4. press ENTER and unit will shut off.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
M56 Reset	Use Reset Options in the menu.	1. Turn unit OFF - Press and hold the down arrow key. 2. Press power, unit will enter production test mode. 3. Press exit key 5 times. 4. press ZOUT and unit will shut off.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
M68C Reset	1. Turn unit OFF 2. Press and hold the pages and power keys. 3. When the alarm box appears, release the keys.	1. Turn unit OFF - Press and hold the down arrow key. 2. Press power, unit will enter production test mode. 3. Press exit key 5 times. (System Info Screen) 4. press ZOUT and unit will shut off.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
M68C IceMachine Reset	1. Turn unit OFF 2. Press and hold the pages and power keys. 3. When the alarm box appears, release the keys.	1. Turn unit OFF - Press and hold the down arrow key. 2. Press power, unit will enter production test mode. 3. Press exit key 5 times. (System Info Screen) 4. press ZOUT and unit will shut off.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
SeaNav 12 Reset	1. Turn unit OFF	1. Turn unit OFF

Lowrance Unit Resets

	2. Press and hold the MODE (or PAGES) key	2. Press and hold the UP & DOWN arrow keys
	3. Press and release the PWR key	3. Press and hold the PWR key
	4. Release PAGES key when the unit completely powers up	4. Release both buttons when TEST MENU appears
		5. Advance cursor to FINAL SETUP, press EXIT, then ENTER
		to exit mode
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
SeaNav 120 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the MODE (or PAGES) key	2. Press and hold the UP & DOWN arrow keys
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when TEST MENU appears
		5. Advance cursor to FINAL SETUP, press EXIT, then ENTER
		to exit mode
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
SeaView 1000 Reset		
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
SeaView 1200 Reset		
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
SeaView 1600 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the EXIT key	2. Press and hold the LEFT & RIGHT arrow keys
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when unit powers up
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>

Lowrance Unit Resets

SeaView 2000 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the CLR key	2. Press and hold the upper left hand corner key
	3. Turn unit ON	3. Turn unit ON
	4. Release both buttons when unit powers up	4. A test screen appears
		5. Release upper left hand corner key
		6. Press the CLR key
		7. Shut unit off
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
SeaView 628 Reset		
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
SeaView 800 Reset		
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
Silva Atlantis Pro Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the USA map appears	4. A tone will sound
		5. When tone is sounding, release buttons and immediately press and hold the FIND key.
		6. While pressing FIND, a higher tone will sound
		7. The unit will reset. Turn unit OFF and back ON.
	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Hard Reset (Deletes stored GPS Data such as Waypoints and trails)</b>
Silva Atlas Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time

Lowrance Unit Resets

	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the Status Page appears	4. A tone will sound
		5. When tone is sounding, release buttons and immediately press and hold the FIND key.
		6. While pressing FIND, a higher tone will sound
		7. The unit will reset. Turn unit OFF and back ON.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X100C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the EXIT key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when the unit beeps.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X102C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when the unit beeps.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X105C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when the unit beeps.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X107CDF Reset	1. Turn unit OFF	1. Turn unit OFF

Lowrance Unit Resets

	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when the unit beeps.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X125 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when the unit beeps.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X126DF Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when the unit beeps.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X135 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when the unit beeps.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X136DF Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the PAGES key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key

Lowrance Unit Resets

	4. Release both buttons when the unit powers up	4. Release both buttons when the unit beeps.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X510C Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the Mode key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when the unit beeps.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X515CDF Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the Mode key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when the unit beeps.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X 28 Reset	N/A	N/A
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X 29 Reset	N/A	N/A
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X37TX Reset		1. Turn unit OFF - Press and hold the up arrow key.
		2. Press power, unit will enter keyboard test mode.
		3. Release up arrow and power key.
		3. Press PWR/clear key 7 times. (System Info Screen)
		4. press MENU/DOWN key and unit will shut off.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X38 Reset	N/A	N/A

Lowrance Unit Resets

	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X 47 Reset		<ol style="list-style-type: none"> <li>1. Turn unit OFF - Press and hold the up arrow key.</li> <li>2. Press power key. Unit will enter Keyboard test mode.</li> <li>3. Release up arrow key.</li> <li>4. Press menu up or down key one time.</li> <li>5. Press PWR/clear key 5 times. Unit will show system info screen.</li> <li>6. Press MENU/DOWN key and unit will shut off.</li> </ol>
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X47EX Reset		<ol style="list-style-type: none"> <li>1. Turn unit OFF - Press and hold the up arrow key.</li> <li>2. Press power, unit will enter keyboard production test mode.</li> <li>3. Release up arrow key.</li> <li>4. Press PWR/clear key 6 times. (System Info Screen)</li> <li>5. press MENU/DOWN and unit will shut off.</li> </ol>
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X47TX Reset		<ol style="list-style-type: none"> <li>1. Turn unit OFF - Press and hold the up arrow key.</li> <li>2. Press power key. Unit will enter keypad test mode.</li> <li>3. Release up arrow &amp; power keys.</li> <li>4. Press PWR/clear key 7 times. (System Info Screen)</li> <li>5. press MENU/DOWN and unit will shut off.</li> </ol>
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X48 Reset	N/A	N/A
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X49 Reset	N/A	N/A

Lowrance Unit Resets

	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X50 DS Reset		<ol style="list-style-type: none"> <li>1. Turn unit OFF - Press and hold the up arrow key.</li> <li>2. Press power, unit will enter keyboard production test mode.</li> <li>3. Release up arrow key.</li> <li>4. Press PWR/Clear key 7 times. (System Info Screen)</li> <li>5. press MENU/DOWN and unit will shut off.</li> </ol>
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X51 Reset		<ol style="list-style-type: none"> <li>1. Turn the unit OFF</li> <li>2. Press and hold the UP arrow key.</li> <li>3. Press and hold the PWR key.</li> <li>4. Production test mode will appear.</li> <li>5. Press clear 5 times and you will see System Info Screen</li> <li>6. Press MENU/DOWN and the unit will shut off</li> </ol>
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X52 Reset		<ol style="list-style-type: none"> <li>1. Turn the unit OFF</li> <li>2. Press and hold the DOWN arrow key.</li> <li>3. Press and hold the PWR key.</li> <li>4. A Test Screen will appear.</li> <li>5. Press the EXIT key 6 times and you will see System Info Screen</li> <li>6. Press the ENTER/PAGES key and the unit will shut off.</li> </ol>
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X57TX Reset		<ol style="list-style-type: none"> <li>1. Turn unit OFF - Press and hold the up arrow key.</li> <li>2. Press power key. Unit will enter keypad test mode.</li> </ol>

Lowrance Unit Resets

		3. Release up arrow & power keys.
		4. Press PWR/clear key 7 times. (System Info Screen)
		5. press MENU/DOWN and unit will shut off.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X58DF Reset		1. Turn the unit OFF
		2. Press and hold the UP arrow key.
		3. Press and hold the PWR key.
		4. Production test mode will appear.
		5. Press clear 5 times and you will see System Info Screen
		6. Press MENU/DOWN and the unit will shut off
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X59DF Reset		1. Turn the unit OFF
		2. Press and hold the UP arrow key.
		3. Press and hold the PWR key.
		4. Production test mode will appear.
		5. Press clear 5 times and you will see System Info Screen
		6. Press MENU/DOWN and the unit will shut off
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X65 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the EXIT key	2. Press and hold the LEFT & RIGHT arrow keys
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when unit powers up
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>

Lowrance Unit Resets

X67C Reset		<p>1. Turn unit OFF - Press and hold the down arrow key.</p> <p>2. Press power, unit will enter production test mode.</p> <p>3. Press exit key 5 times.</p> <p>4. press ENTER and unit will shut off.</p>
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X67C IceMachine Reset		<p>1. Turn unit OFF - Press and hold the down arrow key.</p> <p>2. Press power, unit will enter production test mode.</p> <p>3. Press exit key 5 times.</p> <p>4. press ENTER and unit will shut off.</p>
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X70 Reset	<p>1. Turn unit OFF</p> <p>2. Press and hold the CLR key</p> <p>3. Turn unit ON</p> <p>4. Release both buttons when unit powers up</p>	<p>1. Turn unit OFF</p> <p>2. Press and hold the upper left hand corner key</p> <p>3. Turn unit ON</p> <p>4. A test screen appears</p> <p>5. Release upper left hand corner key</p> <p>6. Press the CLR key</p> <p>7. Shut unit off</p>
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X70 A Reset	<p>1. Turn unit OFF</p> <p>2. Press and hold the CLR key</p> <p>3. Turn unit ON</p> <p>4. Release both buttons when unit powers up</p>	<p>1. Turn unit OFF</p> <p>2. Press and hold the upper left hand corner key</p> <p>3. Turn unit ON</p> <p>4. A test screen appears</p> <p>5. Release upper left hand corner</p>

Lowrance Unit Resets

		key
		6. Press the CLR key
		7. Shut unit off
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X70 A 3D Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the CLR key	2. Press and hold the upper left hand corner key
	3. Turn unit ON	3. Turn unit ON
	4. Release both buttons when unit powers up	4. A test screen appears
		5. Release upper left hand corner key
		6. Press the CLR key
		7. Shut unit off
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X71 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the EXIT key	2. Press and hold the Menu Key
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when LCD test mode appears. Press Exit
		5. Press Exit to remove the split screen
		6. turn the unit off.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X75 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the EXIT key	2. Press and hold the LEFT & RIGHT arrow keys
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when unit powers up

Lowrance Unit Resets

	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X85 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the EXIT key	2. Press and hold the LEFT & RIGHT arrow keys
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when unit powers up
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X86 DS Reset		1. Turn unit OFF - Press and hold the up arrow key.
		2. Press power, unit will enter keyboard production test mode.
		3. Release up arrow key.
		4. Press PWR/clear key 7 times. (System Info Screen)
		5. press MENU/DOWN and unit will shut off.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X87 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the EXIT key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when the unit beeps.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X88DF Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the EXIT key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when the unit beeps.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X91 Reset	1. Turn unit OFF	1. Turn unit OFF

Lowrance Unit Resets

	2. Press and hold the EXIT key	2. Press and hold the Menu Key
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when LCD test mode appears. Press Exit
		5. Press Exit to remove the split screen
		6. turn the unit off.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X96 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the EXIT key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when the unit beeps.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X97 Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the EXIT key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when the unit beeps.
	<b>Soft Reset (Does not delete Data)</b>	<b>Hard Reset (Deletes stored data)</b>
X98DF Reset	1. Turn unit OFF	1. Turn unit OFF
	2. Press and hold the EXIT key	2. Press and hold the ZIN&ZOUT Keys at the same time
	3. Press and hold the PWR key	3. Press and hold the PWR key
	4. Release both buttons when the unit powers up	4. Release both buttons when the unit beeps.

Lowrance Unit Resets

	<b>Soft Reset (Does not delete GPS Data)</b>	<b>Power Reset (Only resets power to the unit. No data is lost or settings changed.)</b>
XOG Reset	1. Press the box in the upper left hand corner.	1. Press button on the right side of the unit.
	2. Select options. Page 3	2. Unit will shut off.
	3. Select Reset Options. Select Yes.	